

Rhino Repel Laminate Care & Maintenance

Maintenance and care damage resulting from improper care and maintenance of the floor is not covered by warranty.

1. Sweep or vacuum using soft bristle attachments.
2. Do not allow topical moisture to remain on the floor longer than the time specified in the product warranty. If detected, promptly remove all liquid spills and never flood the floor with water.
3. Use a dry mop or occasionally wet mop with water only, using a well wrung out mop, do not pour liquid directly on the floor or use an excessively wet mop that will puddle or leave moisture standing on the floor. If needed, use a solution of 1 cup of vinegar per gallon of water.
4. Residential steam mops are allowed, if used at the lowest power setting with a suitable soft pad and then move the mop along the floor in even strokes, making sure not to hold it in one spot for any extended amount of time. Refer to steam mops instructions for proper usage.
5. Do not use detergents, abrasive cleaners, soaps, oils, waxes or polishes on your floor. For tough spots, use a damp cloth or apply a little rubbing alcohol on a clean cloth and rub to remove the spot.
6. Do not use steel wool or scouring powder which can scratch the floor.
7. When moving furniture, lift and never slide the furniture over the floor and always use felt floor protectors.
8. To protect the floor from sand we recommend you to use the doormats at entries (but do not use mats with a rubber backing).